




Spare Parts Guide



BOM

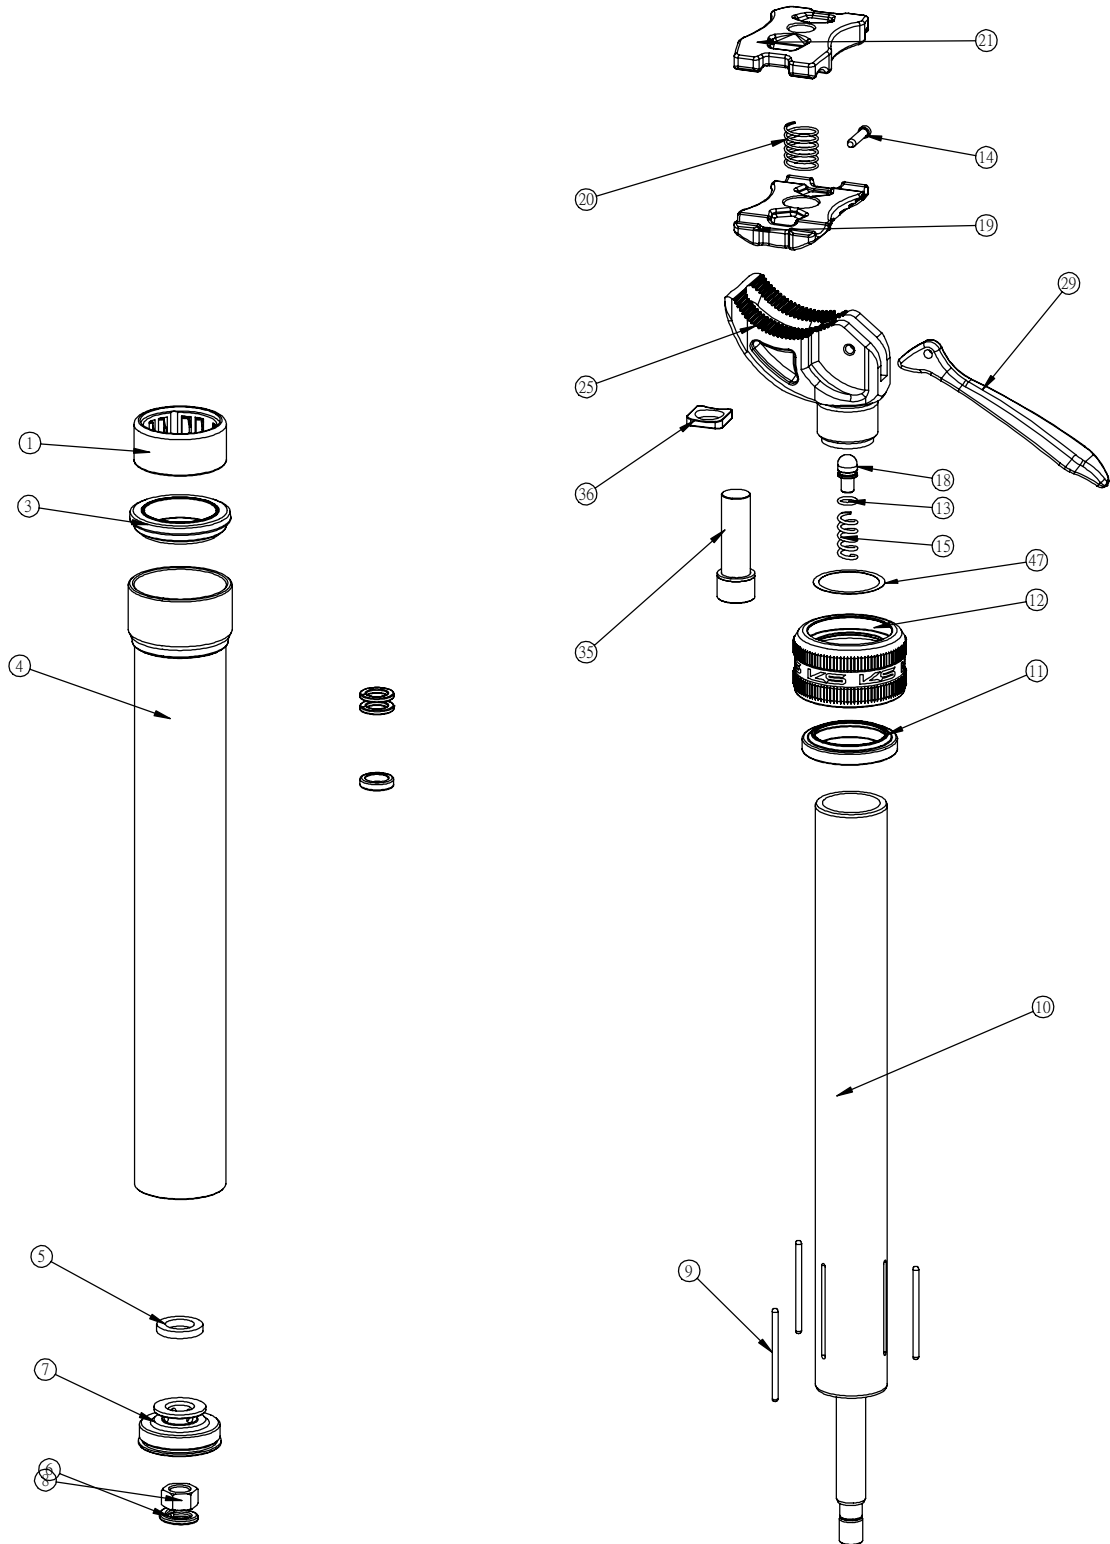

Index	Part Number	Description
1	P47 05	Roller Bearing
3	P32 06+P23 05	Du Bushing Carrier
4	P40 BHL	Mast Shaft
5	P13 07	Bottom Out Bumper
6	P56 03	Spring washer
7	P10 09	Mast Shaft End Cap
8	P54 02	Cartridge Shaft Nut
9	P26 HL	Lower Guide Bushing
10	A3102-75 A3102-100 A3102-125	Oil Pressure Stick
11	P43 06	Wiper Seal
12	P10 10	Seal Collar
13	P285*1	Piston O-ring(Ø 5 × Ø 1)
14	P14 26	Lever/Actuator Pivot Pin
15	P55 10	Piston Spring(Dropzone)
18	P26 GL	Piston(Dropzone)
19	P37 02	Lower Seat Clamp (Dropzone)
20	P55 08	Seat Clamp Spring (Dropzone)
21	P37 01	Upper Seat Clamp (Dropzone)
25	P01 18	Clamp Head (Dropzone)
29	P39 07	Integrated Lever
35	P14 19	Seat Clamp Bolt (Dropzone)
36	P31 16	Seat Clamp Bolt Washer(Dropzone)
47	P31 22	Washer