




# Spare Parts Guide

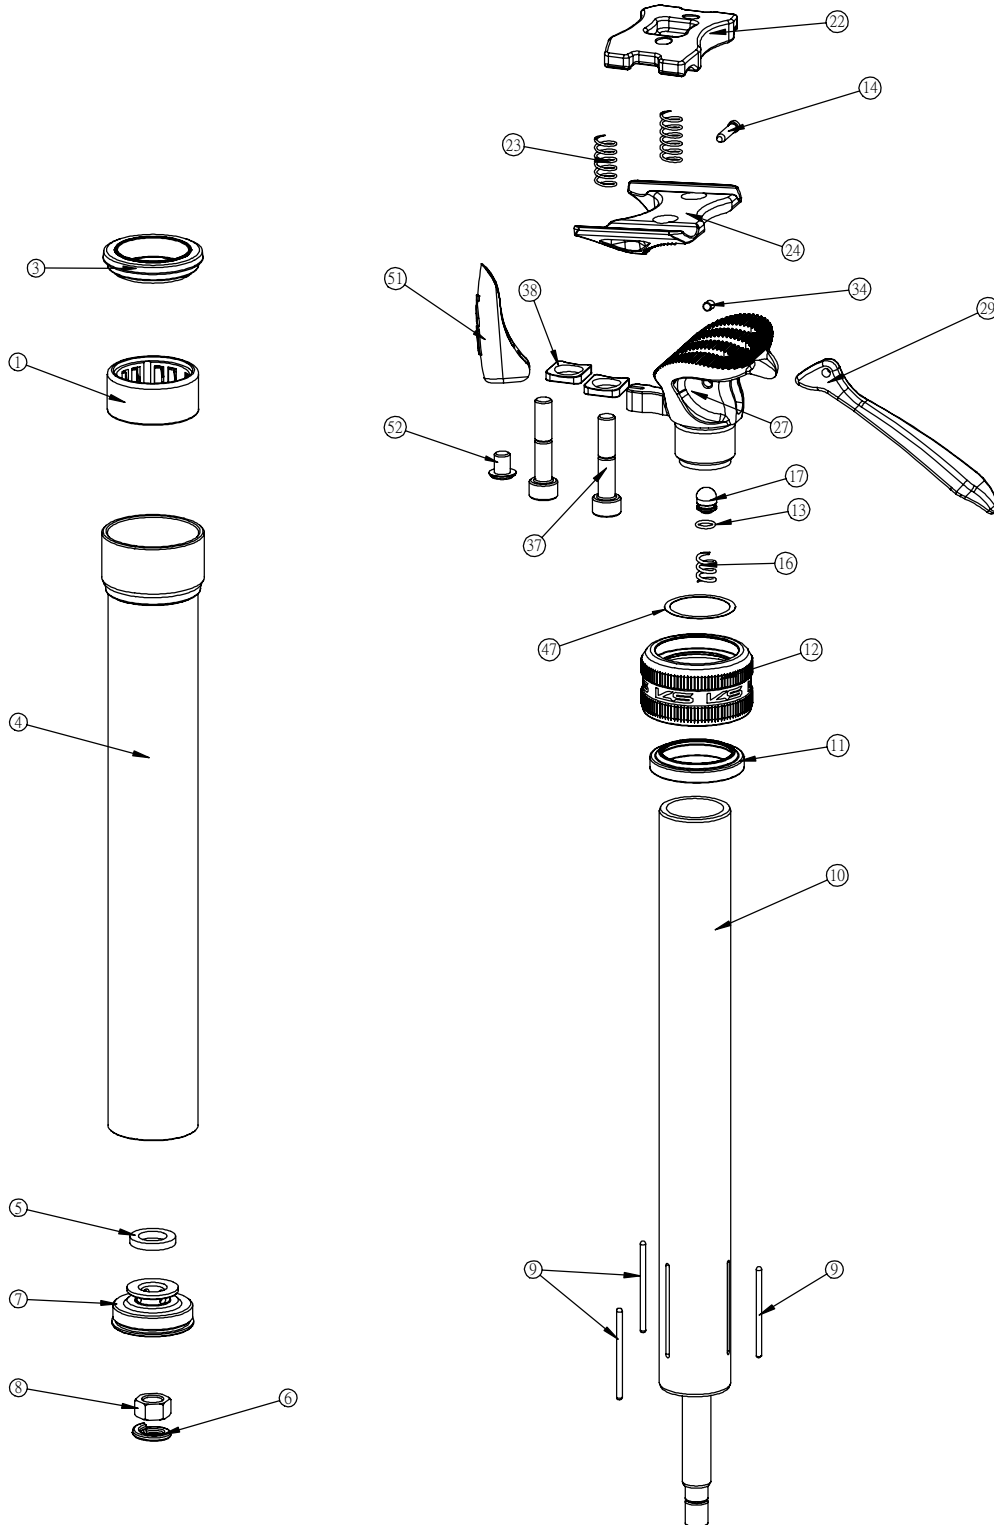

# BOM



Index	Part Number	Description
1	P47 05	Roller Bearing
3	P32 06+P23 05	Du Bushing Carrier
4	P40 BHL	Mast Shaft
5	P13 07	Bottom Out Bumper
6	P56 03	Spring washer
7	P10 09	Mast Shaft End Cap
8	P54 02	Cartridge Shaft Nut
9	P26 HL	Lower Guide Bushing
10	A3102-75	Oil Pressure Stick
	A3102-100	
	A3102-125	
	A3102-150	
11	P43 06	Wiper Seal
12	P10 10	Seal Collar
13	P285*1	O-ring( $\varnothing 5 \times \varnothing 1$ )
14	P14 26	Lever/Actuator Pivot Pin
16	P55 15	Piston Spring(Supernatural)
17	P26 JL	Piston(Supernatural)
22	P37 05	Upper Seat Clamp Supernatural)
23	P55 13	Seat Clamp Spring (Supernatural)
24	P37 06	Lower Seat Clamp (Supernatural)
27	P01 21	Clamp Head (Supernatural)
29	P39 07	Integrated Lever
34	P1401	Housing Set Screw
37	P14 29	Seat Clamp Bolt (Supernatural)
38	P31 17	Seat Clamp Bolt Washer(Supernatural)
47	P31 22	Washer
51	P43 12	Mud Guard
52	P43 11	Retainer Pin